

FLOATRON FOR HOT TUBS

OUTDOOR

- 1 Float the Floatron on a sunny day for an afternoon.
- 2 Run the pump now and then. If there is low volume circulation this may be left running during mineralisation.
- 3 As soon as the level of 3-5ppm copper is shown on the testkit provided remove the Floatron.
- 4 Once the level is established test every two weeks and re-mineralise as required.
- 5 After using the hot tub pour a few splashes of bleach into the water and run the pump for a minute. By the time the tub is used again the chlorine (bleach) will be gone.

INDOOR

- 1 Float the Floatron in a bucket of water in good sunlight for 10 –15 minutes. Add this mineralised water to the tub. Repeat until the copper level reading is as No.3 above and continue as Instructions 4,5